



SPY CAMERA

AGES 6 & UP

TAKE REAL SPY PHOTOS...
LOOK COOL UNDERCOVER

IMPORTANT: Keep these instructions. DO NOT DISCARD.
Do not stare directly at the sun even when wearing the sunglasses. Remove UV label from lens on sunglasses.

FEATURES (Figure 1)

Features of the Spy Camera include:

- A mini 110 spy camera.
- Sunglasses.
- Kodak 110 film cartridge.
- A secret storage compartment disguised as a roll of film.
- A squeeze bulb to take photos.
- A viewfinder to center your photo subject.

FOR BEST PHOTO QUALITY :

- Take pictures outdoors in bright light conditions.
- Take pictures of objects 7-10 feet away (2-3 meters).
- Do not remove film until all pictures have been taken on the roll of film and the film has been advanced to the end.

SPY CAMERA ASSEMBLY (No tools required)

Before you start, make sure you have the following items:

1. Spy Camera
2. Viewfinder
3. Sunglasses
4. Tubing with Squeeze Bulb

1. Attach the Spy Camera to the sunglasses (Figure 2):

- a. Locate clip on the Spy Camera.
- b. Locate the flanges on the left arm of the sunglasses.
- c. With the front of the Spy Camera facing in the same direction as the front of the sunglasses, slip the camera clip in between the flanges on the sunglasses arm (Step 1) and rotate down as shown in (Step 2).

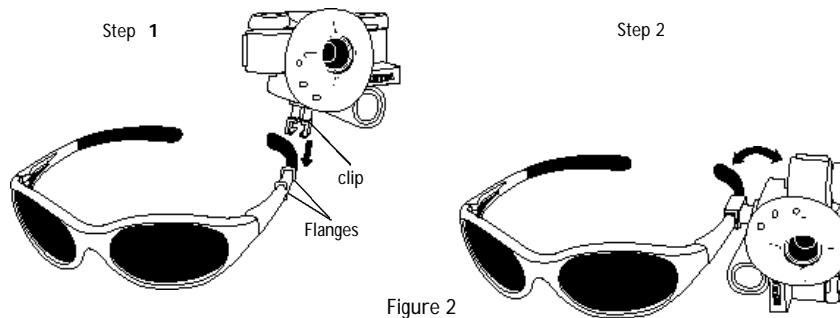


Figure 2

2. Attach the viewfinder to the camera assembly

- a. As shown in Figure 3, snap viewfinder to clip on the Spy Camera (Step 1) and rotate down over the left lens of the sunglasses. (Step 2)

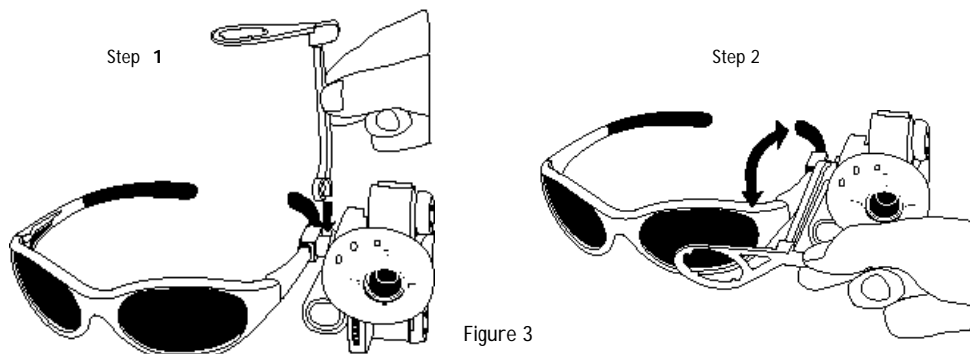


Figure 3


Spy Camera




Sunglasses



Viewfinder

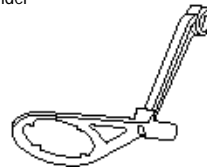

Squeeze Bulb

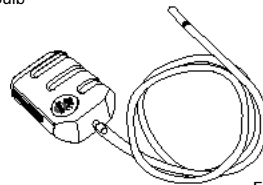

Secret Storage Compartment

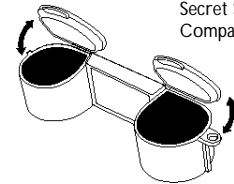


Figure 1

3. Attach squeeze bulb assembly to Spy Camera

- Locate end of tubing not attached to squeeze bulb. (Figure 4)
- Insert the tube into the hole on back side of the camera. Twist and push until the plastic tip is firmly seated. (Figure 5)

Figure 4


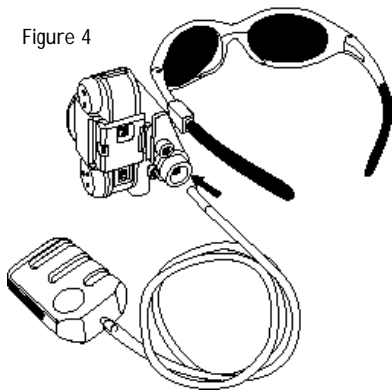


Figure 5

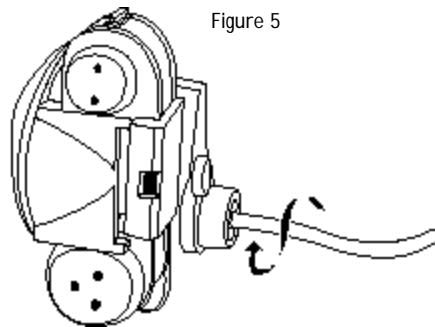

SECRET STORAGE COMPARTMENT

The Spy Camera comes with a secret storage compartment disguised as a film cartridge. Please note this is not film. It is used to store loose change or other small items. It needs to be removed from the camera so that you can load the film in its place.

TO LOAD 110 FILM CARTRIDGE

- Remove film from packaging.
- Locate the door on the back side of the camera. (Figure 6)
- Place finger in door groove and pry open.
- Look at the film and locate the end with a raised up notch on it.
- Position film as shown on the camera door diagram, or in Figure 6, and insert in the camera.
- Close door.
- Locate the advance winder on the bottom front side of the camera. (Figure 7)
- With your finger, rotate the advance winder down until it stops. Your camera should be ready to take pictures.
- To check that you have properly loaded the film, check the back side of the camera door. The number "1" should appear in the little window. (Figure 8)

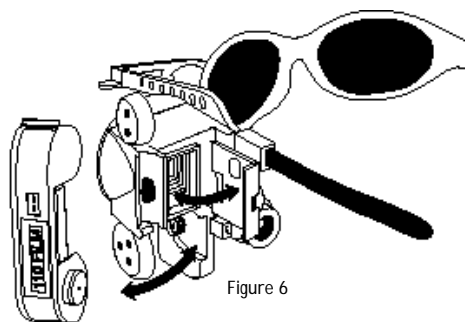


Figure 6

HOW TO TAKE GREAT SPY PICTURES

A large viewfinder has been included with the Spy Camera so you can easily take photos.

- Put on sunglasses with Spy Camera attached.
 - Flip down viewfinder in front of the left lens on the sunglasses. It should click into position.
 - Check to verify that film is advanced and ready.
 - Place squeeze bulb in your hand.
 - Find the subject you wish to photograph.
 - Center it within the viewfinder on your left eye. (Figure 9)
 - Squeeze the Squeeze Bulb. You will hear a click sound which indicates the picture has been taken.
 - Rotate the advance winder downward until it stops. The next picture frame number will appear through the camera window.
 - Find a new subject and repeat the steps to take a picture.
- (Hint: when you are not taking pictures, you can flip the viewfinder up out of your way. Just rotate it up.)

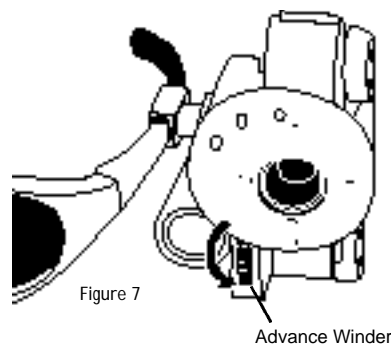


Figure 7

Advance Winder

TO UNLOAD 110 FILM CARTRIDGE:

- Advance the Winder until it stops and nothing shows through the window on the camera door.
 - Open camera door.
 - Remove film. It is now ready to be developed.
- Note: When the film is developed, each picture will be framed with a black "Spy Cam" border as shown in Figure 10.

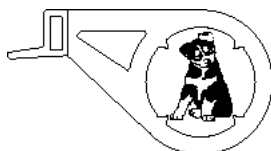


Figure 9



Figure 10

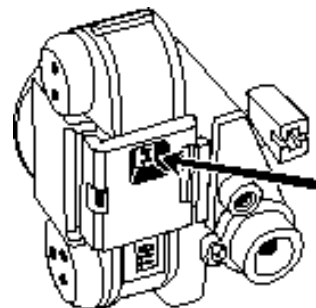


Figure 8

Spy Camera
70027-4000 5/2/99
Wild Planet Toys, Inc.

WARNING:

CHOKING HAZARD: Small Parts
Not for Children Under 3 Yrs.